


Installation Guide



SPECIFICATIONS	PARTS INCLUDED	OPTIONS																																																			
<ul style="list-style-type: none"> • 18 Gauge Galvanized Steel • 3" x 3" (76mm x 76mm) Gutter Standard • Minimum 3 Support Gussets 	<table border="1"> <thead> <tr> <th>✓</th> <th>QTY</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td></td> <td>1</td> <td>Metal Canopy</td> </tr> <tr> <td></td> <td>1</td> <td>Right Gusset</td> </tr> <tr> <td></td> <td>1</td> <td>Left Gusset</td> </tr> <tr> <td></td> <td>1</td> <td>Center Gusset</td> </tr> <tr> <td></td> <td>14</td> <td>3/8" x 1 7/8" Sleeve Anchors</td> </tr> <tr> <td></td> <td></td> <td>#10 x 3/4" Tapping Screws:</td> </tr> <tr> <td></td> <td>24</td> <td>For 18" (457mm) Canopy</td> </tr> <tr> <td></td> <td>30</td> <td>For 24" (610mm) Canopy</td> </tr> <tr> <td></td> <td>39</td> <td>For 36" (914mm) Canopy</td> </tr> </tbody> </table>	✓	QTY	DESCRIPTION		1	Metal Canopy		1	Right Gusset		1	Left Gusset		1	Center Gusset		14	3/8" x 1 7/8" Sleeve Anchors			#10 x 3/4" Tapping Screws:		24	For 18" (457mm) Canopy		30	For 24" (610mm) Canopy		39	For 36" (914mm) Canopy	<table border="1"> <thead> <tr> <th>✓</th> <th>QTY</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>Additional Gussets</td> </tr> <tr> <td></td> <td></td> <td>Snow Load Supports Includes:</td> </tr> <tr> <td></td> <td>2</td> <td>1/4" x 36" (6mm x 914mm) Galvanized Chains</td> </tr> <tr> <td></td> <td>2</td> <td>3/8" x 3" (0.4mm x 76mm) Eye Bolts</td> </tr> <tr> <td></td> <td>2</td> <td>3/8" Hex Nuts</td> </tr> <tr> <td></td> <td>2</td> <td>3/8" Lock Washers</td> </tr> </tbody> </table>	✓	QTY	DESCRIPTION			Additional Gussets			Snow Load Supports Includes:		2	1/4" x 36" (6mm x 914mm) Galvanized Chains		2	3/8" x 3" (0.4mm x 76mm) Eye Bolts		2	3/8" Hex Nuts		2	3/8" Lock Washers
✓	QTY	DESCRIPTION																																																			
	1	Metal Canopy																																																			
	1	Right Gusset																																																			
	1	Left Gusset																																																			
	1	Center Gusset																																																			
	14	3/8" x 1 7/8" Sleeve Anchors																																																			
		#10 x 3/4" Tapping Screws:																																																			
	24	For 18" (457mm) Canopy																																																			
	30	For 24" (610mm) Canopy																																																			
	39	For 36" (914mm) Canopy																																																			
✓	QTY	DESCRIPTION																																																			
		Additional Gussets																																																			
		Snow Load Supports Includes:																																																			
	2	1/4" x 36" (6mm x 914mm) Galvanized Chains																																																			
	2	3/8" x 3" (0.4mm x 76mm) Eye Bolts																																																			
	2	3/8" Hex Nuts																																																			
	2	3/8" Lock Washers																																																			
TOOLS REQUIRED																																																					
<ul style="list-style-type: none"> • Drill • 5/8" Masonry Drill Bit • 3/8" Masonry or Wood Drill Bit • Marking Pencil • Ratchet / Wrench 																																																					

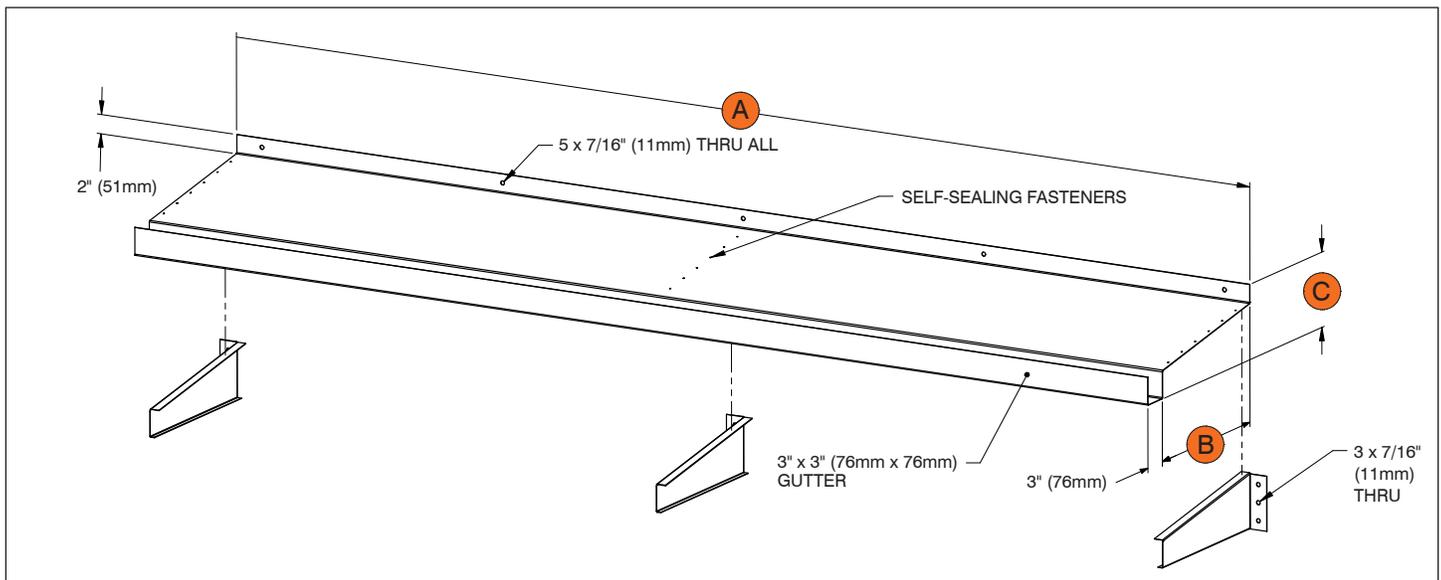


MODEL	WIDTH (A)	PROJECTION (B)	HEIGHT (C)
70-001808	120" (3048mm)	18" (457mm)	6" (152mm)
70-001809		24" (610mm)	8" (203mm)
70-001810		36" (914mm)	12" (305mm)

MODEL	WIDTH (A)	PROJECTION (B)	HEIGHT (C)
70-001815	144" (3658mm)	18" (457mm)	6" (152mm)

Mounting Options:

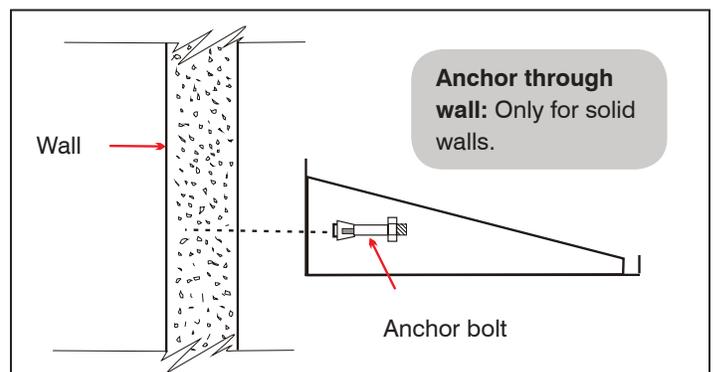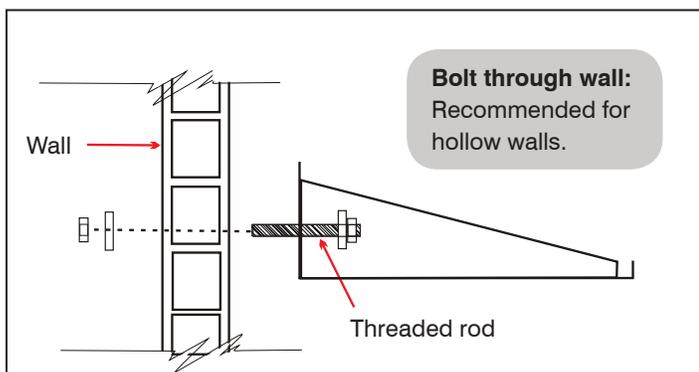

Installation Guide Con't.

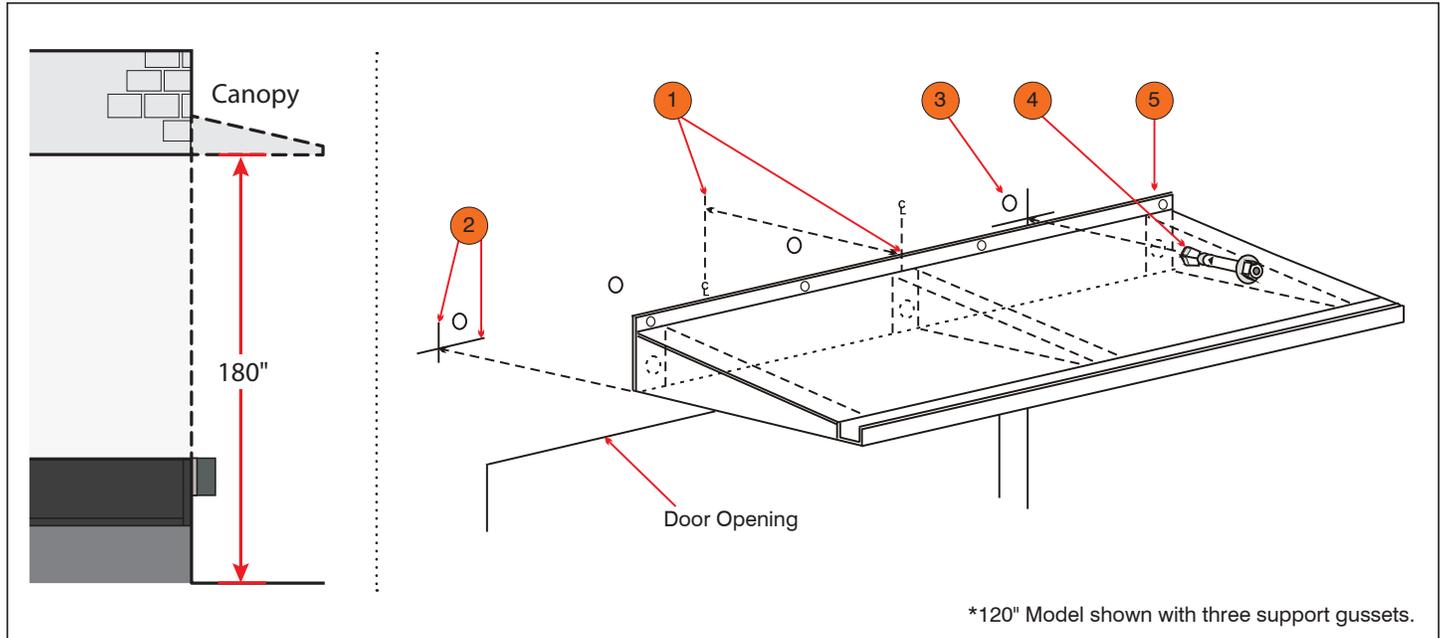

- 1 Mark the center line of both the door opening and the canopy.
- 2 Mark off the position of the canopy above the door opening. **NOTE:** must be clear of any existing seals or shelters.
- 3 Drill holes in the wall to match the mounting holes in the canopy.
- 4 Position the canopy so that the holes are correctly aligned and anchor it to the wall.
- 5 Apply caulking across the top of the canopy.

Optional: For canopies with a projection that is 36" (914mm) or over, or in areas where snow or ice accumulates, fit four wire stringers from the front of the canopy to the wall.

***Note:** 144" (3658mm) wide canopies require four support gussets.